

Cessna C-172S (Nav III) Normal Checklist



BEFORE START BRAKES TEST & SET PASSENGER BRIEFING COMPLETE SEATS ADJUST & LOCK SEATBELTS & HARNESSES FASTEN AVIONICS BUS 1 & 2 OFF ELECTRICAL EQUIPMENT OFF CIRCUIT BREAKERS CHECK IN FUEL SHUTOFF (Full In) ON FUEL SELECTOR BOTH STANDBY BATTERY (Hold 10 seconds)TEST & ARM ENGINE INDICATING SYSTEM (No red "X") CHECK BUS "M" VOLTS (1.5 or less) CHECK BUS "E" VOLTS (24 or more) CHECK (Discharge) CHECK BATT "S" AMPS CHECK STANDBY BATTERY ANNUNCIATOR **STARTING ENGINE** (For "Hot" & "Flooded" starts, ref: POH Section 4) MASTER SWITCH ON BEACON ON NAVIGATION LIGHTS AS REQUIRED THROTTLE 1/4 INCH OPEN MIXTURE **IDLE CUT-OFF** PRIME AS REQUIRED **PROPELLER AREA CLEAR** MAGNETOS START MIXTURE (As engine starts) FULL RICH **OIL PRESSURE** CHECK **BEFORE TAXI** BATT "M" AMPS (Positive) CHECK BATT "S" AMPS (Positive) CHECK CHÉCK OFF LOW VOLTS ANNUNCIATOR AVIONICS BUS 1 & 2 ON FLAPS RETRACT MFD DATABASE ACKNOWLEDGE MIXTURE (1200 / Max RPM / 1000) ADJUST FLIGHT PLAN **BUILD & ACTIVATE** NAV (VOR/WAAS as required) VERIFY FUEL TOTALIZER SET RADIOS SET COPY ATIS ALTIMETERS (PFD & Standby) SET SET ALTITUDE SELECT SET TRANSPONDER TAXI PARKING BRAKE RELEASE TAXI LIGHT ON

BRAKES, NOSE STEERING & FLIGHT INST.

CHECK

ENGINE RUNUP	
PARKING BRAKE	SET
TAXILIGHT	OFF
MIXTURE	FULL RICH
THROTTLE	1800 RPM
	p: 150, Max diff.: 50) CHECK
ENGINE INDICATORS	CHECK
VACUUM	CHECK
VOLTMETERS & AMMETERS	CHECK
ANNUNCIATORS	CHECK CLEAR
THROTTLE	IDLE THEN 1000 RPM
MIXTURE	ADJUST
BEFORE TAKEOF	F
DOORS & WINDOWS	CLOSED & LOCKED
SEATBELTS & HARNESSES	FASTENED & SECURED
MAGNETOS	BOTH
CABIN PWR 12V	OFF
FLIGHT CONTROLS	FREE & CORRECT
AUTOPILOT	ENGAGE
FLIGHT CONTROLS	CHECK
AUTOPILOT (With button on co	ntrol wheel) DISCONNECT
FLIGHT DIRECTOR	OFF
FLIGHT INSTRUMENTS	(PFD) CHECK
CDI SOFT KEY	SELECT NAV SOURCE
OIL PRESSURE & TEMPERATUR	
STANDBY FLIGHT INSTRUMENT	
FLAPS	() SET
TRIM	SET
FUEL SELECTOR	BOTH
TAKEOFF BRIEFING	COMPLETE
RADIOS PITOT HEAT	SET AS REQUIRED
	AS REQUIRED
LANDING, TAXI & STROBE LIGH	
MIXTURE	FULL RICH
NORMAL TAKEOI	F
THROTTLE	FULL OPEN
ROTATE	55 KIAS
CLIMB	Vy
SHORT FIELD TAI	KEOFF (Flaps 10)
	HOLD
BRAKES	HOLD FULL OPEN
BRAKES THROTTLE	FULL OPEN RELEASE
BRAKES THROTTLE BRAKES	FULL OPEN RELEASE
BRAKES THROTTLE BRAKES ROTATE CLIMB	FULL OPEN

		I
CLIMB		
AIRSPEED	70-85 KIAS	
THROTTLE	FULL OPEN	
MIXTURE	(Above 3000) ADJUST	
CRUISE		
TRIM	SET	
POWER	2100-2700 RPM	
	ADJUST	
ENGINE INDICATORS	CHECK CHECK	
VOLTMETERS & AMMETERS	CHECK	
LIGHTS	AS REQUIRED	
FMS/GPS	REVIEW & BRIEF	
DESCENT		
LANDING LIGHT	ON	
FUEL SELECTOR	BOTH	
POWER	AS REQUIRED	
MIXTURE	ADJUST	
ALTIMETERS	(PFD & Standby) SET	
ALTITUDE SELECT	SET	
CDI SOFT KEY FMS/GPS	SELECT NAV SOURCE REVIEW & BRIEF	
BEFORE LANDING		
SEAT BACKS		
SEATBELTS & HARNESSES FUEL SELECTOR	BOTH	
MIXTURE	FULL RICH	
LANDING & TAXI LIGHTS	ON	
CABIN PWR 12V	OFF	
AUTOPILOT	DISCONNECT	
FLAPS	AS REQUIRED	
(85 Downwind, 75 Base, 65 Fina		
AFTER LANDING (Clear of Runway)	
RADIO	SET	
LANDING LIGHT	OFF	
TAXI LIGHT	ON	
STROBE LIGHTS PITOT HEAT	OFF OFF	
MIXTURE	ADJUST	
FLAPS	RETRACT	
TRIM	SET	

SHUTDOWN	
PARKING BRAKE	SET
TAXI LIGHT	OFF
ELT	MONITOR 121.50
AVIONICS BUS 1& 2	OFF
THROTTLE	IDLE
MAGNETOS	CHECK
THROTTLE	1000 RPM
MIXTURE	IDLE CUT-OFF
MAGNETOS	OFF
MASTER SWITCH	OFF
TACH & HOBBS TIMES	RECORD
STANDBY BATTERY	OFF
CONTROL LOCK	INSTALL
FUEL SELECTOR	RIGHT TANK
CHOCKS	INSTALL
PITOT TUBE COVER	INSTALL
PARKING BRAKE	RELEASE
EXTERIOR	CHECK
	00
PRE-MANEUVER	
ALTITUDE	CHECK

PRE-MANEUVER	
ALTITUDE	CHECK
AIRSPEED	95 or 105 KIAS
FUEL SELECTOR	BOTH
MIXTURE	ADJUST
LANDING LIGHT	ON
FLAPS	AS REQUIRED

SHORT FIELD T/O SPDS (ROT/OBST)	
2550	51/56 KIAS
2400	48/54 KIAS
2200	44/50 KIAS

Revised: 16 February 2021

** To be used in conjunction with the POH**



C-172SP Emergency & Abnormal Checklist



ENGINE FAILURE (Before Rotation)

THROTTLE	IDLE
BRAKES	APPLY
MIXTURE	IDLE CUT-OFF
FLAPS	RETRACT
MAGNETOS	OFF
MASTER SWITCH	OFF
STANDBY BATTERY	OFF

ENGINE FAILURE (After Rotation)

AIRSPEED	(Flaps up/down) 70/65 KIAS
THROTTLE	IDLE
MIXTURE	IDLE CUT-OFF
FUEL SHUTOFF	(Pull Out) OFF
FLAPS	AS REQUIRED
MAGNETOS	OFF
MASTER SWITCH	OFF
STANDBY BATTER	RY OFF
CABIN DOOR	UNLATCH
LAND	STRAIGHT AHEAD, AVOID OBSTACLES

ENICINE EATITIDE (In Flight)

AIRSPEED		68 KIAS
FUEL SELEC	TOR	BOTH
FUEL SHUT	OFF	(Full In) ON
MIXTURE		RICH
FUEL PUMP		ON
MAGNETOS	(START if prope	ller is not windmilling)BOTH
(IF ENGINE DOES NOT START)		
FUEL PUMP		OFF
	INC	EVECUTE

ENGINE FIRE (During Start)

CABIN

CIRCUIT BREAKERS

STANDBY BATTERY

MASTER SWITCH

AVIONICS BUS 1

AVIONICS BUS 2

STARTER	CONTINUE CRANKING
(IF ENGI	NE STARTS)
THROTTLE	(For a few minutes) 1800 RPM
ENGINE	SHUT DOWN, INSPECT
(IF ENGINE F	AILS TO START)
THROTTLE	FULL OPEN
MIXTURE	IDLE CUT-OFF
STARTER	CONTINUE CRANKING
FUEL SHUTOFF	(Pull Out) OFF
FUEL PUMP	OFF
MAGNETOS	OFF
MASTER SWITCH	OFF
STANDBY BATTERY	OFF
PARKING BRAKE	RELEASE
FIRE EXTINGUISHER	OBTAIN
AIRCRAFT	EVACUATE
FIRE	EXTINGUISH IF POSSIBLE
ENGINE	INSPECT
ENGINE FIRE (In	Flight)
MIXTURE	IDLE CUTOFF
FUEL SHUTOFF	(Pull Out) OFF
FUEL PUMP	OFF
MASTER SWITCH	OFF
CABIN VENTS	OPEN
CABIN HEAT & AIR	OFF
AIRSPEED	100 KIAS
FORCED LANDING	EXECUTE
ELECTRICAL F	IRE
STANDBY BATTERY	OFF
MASTER SWITCH	OFF
CABIN VENTS	CLOSED
CABIN HEAT & AIR	OFF
AVIONICS BUS 1 & 2	OFF
ELECTRICAL SWITCHE	•••
FIRE EXTINGUISHER	ACTIVATE
FIRE EATINGUISHER	ACTIVATE

(AFTER FIRE IS EXTINGUISHED)

(IF ELECTRICAL POWER IS REQUIRED)

VENTILATE

ON

ON

ON

ON

BUS "M" VOLTS

BAT "M" AMPS

(Do NOT Reset) CHECK

CABIN FIRE OFF STANDBY BATTERY **MASTER SWITCH** OFF **CABIN VENTS** CLOSED **CABIN HEAT & AIR** OFF FIRE EXTINGUISHER ACTIVATE (AFTER FIRE IS EXTINGUISHED) CABIN VENTILATE LAND AS SOON AS POSSIBLE WING FIRE **LANDING & TAXI LIGHTS** OFF **NAVIGATION LIGHTS** OFF **STROBE LIGHTS** OFF **PITOT HEAT** OFF SIDESLIP **PERFORM AS REQUIRED** LAND AS SOON AS POSSIBLE LOW OIL PRESSURE **OIL PRESSURE INDICATOR** CHECK (IF PRESSURE & TEMP ARE NORMAL) LAND AT SOON AS POSSIBLE (IF TEMPERATURE IS RED) THROTTLE IDLE FORCED LANDING EXECUTE HIGH VOLTS (Batt "M" AMPS 40+) ALTERNATOR OFF **AVIONICS BUS 1** OFF OFF EXTERNAL LIGHTS PITOT HEAT OFF OFF CABIN PWR 12V **AVIONICS BUS 2** OFF I AND AS SOON AS PRACTICAL LOW VOLTS BELOW 1000 RPM THROTTLE 1000 RPM LOW VOLTS ANNUNCIATOR CHECK OFF ABOVE 1000 RPM OFF ALTERNATOR ALT FIELD CUIRCUIT BREAKER CHECK IN ALTERNATOR ON CHECK OFF LOW VOLTS ANNUNCIATOR

(Minimum 27.5) CHECK

(Positive) CHECK

(CONTINUED) (IF LOW VOLTS ANNUNCIATOR REMAINS) AI TERNATOR

ALTERNATOR	OFF
AVIONICS BUS 1	OFF
EXTERNAL LIGHTS	OFF
PITOT HEAT	OFF
CABIN PWR 12V	OFF
AVIONICS BUS 2	OFF
LAND	AS SOON AS PRACTICAL

AUTOPILOT / ELECTRIC TRIM

(AP or PTRM Annunciators)		
	GRASP FIRMLY PRESS & HOLD	
	ST MANUALLY	
AUTO PILOT CIRCUIT BREAKER	PULL OUT A/P	
DISCONNECT	RELEASE	
ADC FAILURE		
RED "X" AIRSPEED INDICATOR		
ADC / AHRS CIRCUIT BREAKER	CHECK IN	
(Only reset one time) STANDBY AIRSPEED INDICATOR	USE IF NEEDED	
RED "X" ALTITUDE		
ADC / AHRS CIRCUIT BREAKER	CHECK IN	
(Only reset one time) STANDBY ALTIMETER	USE IF NEEDED	
	USE IF NEEDED	
AHRS FAILURE		
RED "X" ATTITUDE INDICATOR		
ADC / AHRS CIRCUIT BREAKER	CHECK IN	
(Only reset one time) STANDBY ATTITUDE INDICATOR	USE IF NEEDED	
STANDBT ATTITODE INDICATOR	USE IF NEEDED	
RED "X" HSI		
ADC / AHRS CIRCUIT BREAKER	CHECK IN	
(Only reset one time)		
MAGNETIC COMPASS	USE IF NEEDED	

S

S

NOTE

Items shown in **BOLD FACE** type are immediate action items which should be committed to memory.

ENGINE FAILURE		
AIRSPEED	68 KIAS	
FUEL SELECTOR	BOTH	
FUEL SHUTOFF	(Full In) ON	
MIXTURE	RICH	
FUEL PUMP	ON	
MAGNETOS (START if propeller is no		
(IF ENGINE DOES NOT START)		
FUEL PUMP	OFF	
FORCED LANDING	EXECUTE	
EODOED LANDING		

ORCED LANDING

AIRSPEED	(Flaps up/down) 70/65 KIAS
SEATS	MOST UPRIGHT
SEATBELTS & HARNESSES	FASTEN & SECURE
FUEL SHUTOFF	(Pull Out) OFF
MIXTURE	IDLE CUT-OFF
RADIO	MAYDAY 121.50
MAGNETOS	OFF
STANDBY BATTERY	OFF
(LANDING ASSURED)	
FLAPS	AS REQUIRED
MASTER SWITCH	OFF
DOOR	UNLATCH
TOUCHDOWN	TAIL LOW
BRAKES	APPLY HEAVILY