

HARDWARE

HOW TO CHANGE THE TOUCH PAD SETTINGS ON UD LAPTOPS

Changing touch pad settings on laptop

1. Start
2. Settings
3. Control Panel
4. Mouse
5. Device Settings tab,
6. Settings (Synaptics TouchPad V6.2)

Here are all the settings for the sensitivity etc.